

2015 Newest Water-Resistant Transmitter Programming



Learning Remote Codes or programming a Transmitter to a Receiver:

Remove the cover from the main control unit. The Receiver is located in the lower right-hand corner of the control enclosure.

After Power is ON:

- A.** Press & hold the Learn Button on the receiver for 3 seconds and release.
- B.** Immediately Press & hold any transmitter button for 3 seconds and release.
- C.** Immediately Press & hold any transmitter button a second time for 3 seconds and release.

All buttons and codes have been read. The Remote is now Fully Functional.

Repeat the above steps for any additional Remotes you wish to program to your TEC Unit.
(Up to 20 Remotes can be Programmed to a TEC Unit)

Clearing Instructions (If Necessary).

Press and continuously hold the learn button until the Led light flashes several times and goes out.

This clears all hand held transmitters to this receiver.

Test the Up, Down, Stop, and Light buttons on the hand held transmitter.

There should not be any response after clearing the codes.

Follow the programming instructions above to now connect each desired transmitter.

****Please Note there is a 3-5 Second Safety Delay When Switching Directions Between Up and Down****