



Replacing TEC Remote Batteries

If you notice the blue light on the transmitter flickering on and off, this is an indication that it is time to replace the batteries as explained below:

This case has no screws, it snaps apart & together.

- There is a slot at the top of the case. Use a large flat head screwdriver in that slot and with inward pressure give a gentle twist. That will snap apart one corner and allow the rest to be pulled apart.
- Carefully pull out the circuit board. There are two (CR2016) 3v button batteries on the circuit board.
- The black plastic retaining ring around the batteries has fingernail slots to pull out. Positive side up on both batteries.
- Use care when putting the case back together that edge of the rubber boot is sitting flat around the edge of the case to provide a good seal.
- You may need to re-program the transmitter to the receiver after the batteries are replaced.